



String Segments Together


Items required:

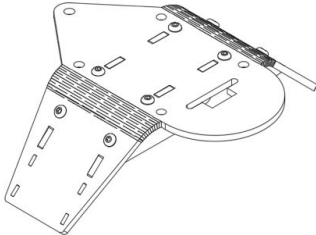


Assembled Head Segment

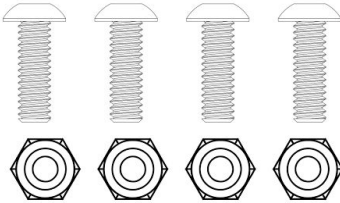


4 .75" Screws & 4 Nuts with Nylon Inserts

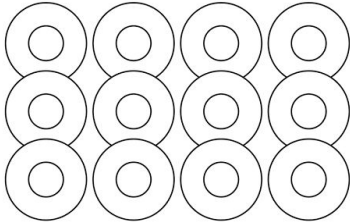

12 Washers

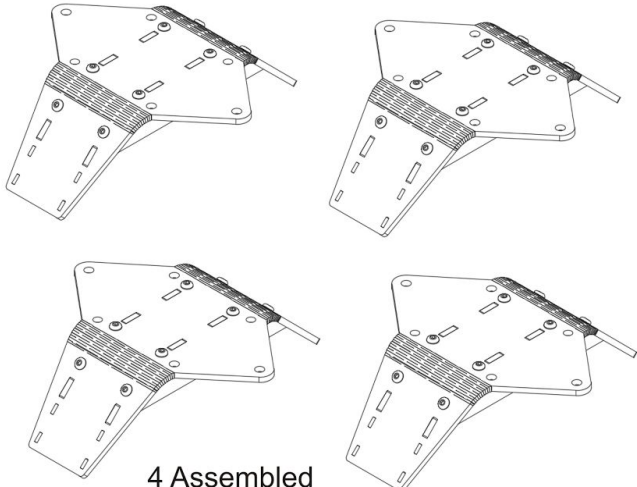


4 Assembled Segments

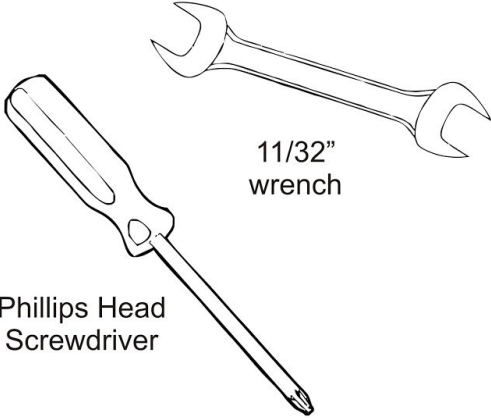

Phillips Head Screwdriver

11/32" wrench

Step 1: Align screw holes of two segments. Using 3 washers, a .75" screw, and a nut with nylon insert, attach as shown below. Tighten until snug then back the nut off a half turn to allow for easy swiveling.

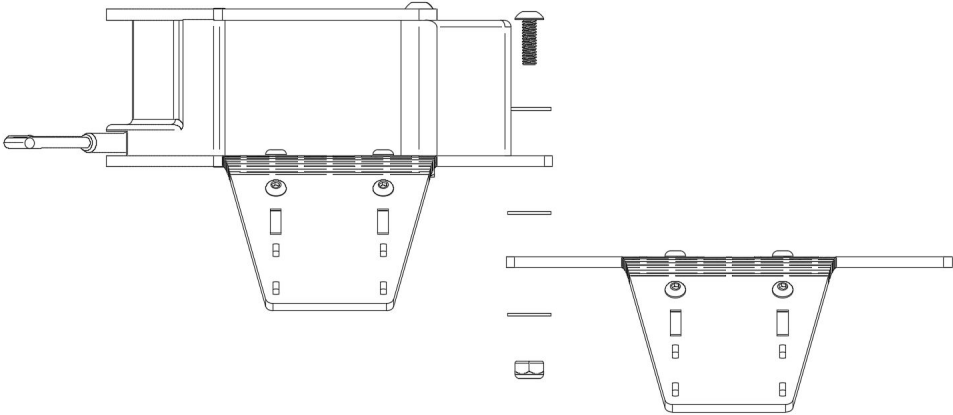

Step 2: Repeat process for 3 remaining joints.

